

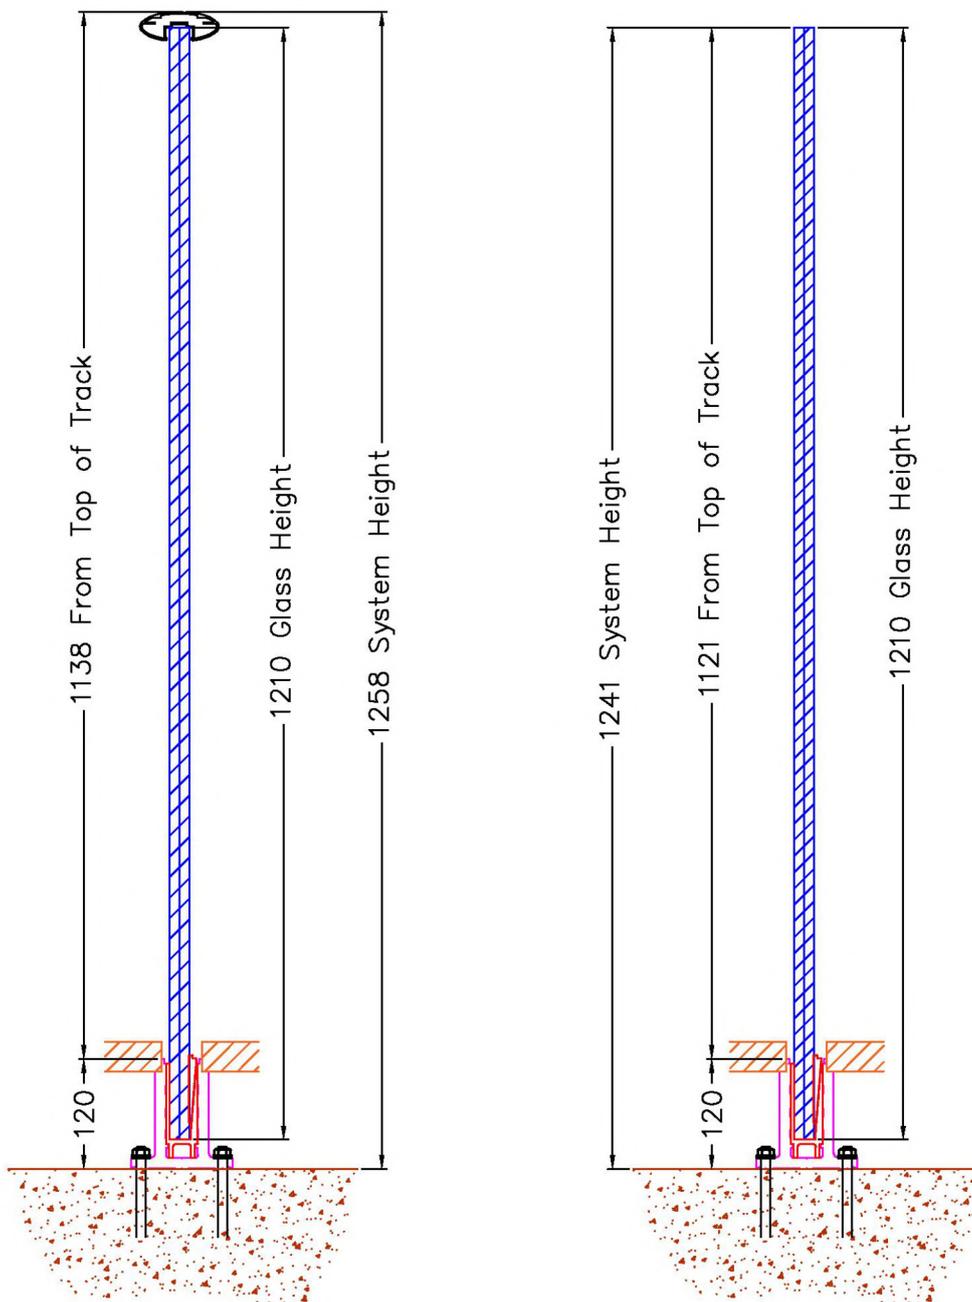


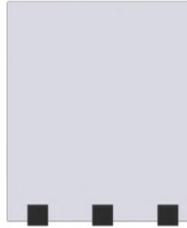
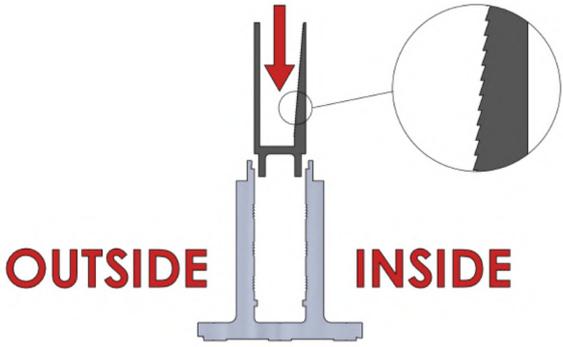
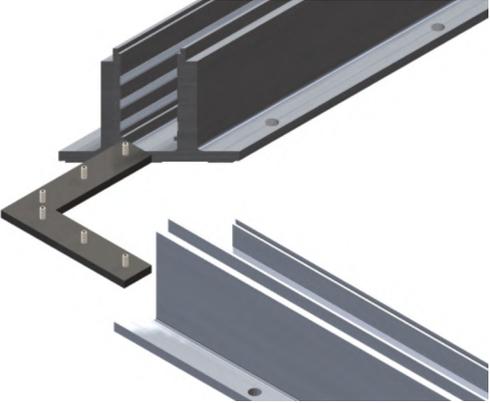
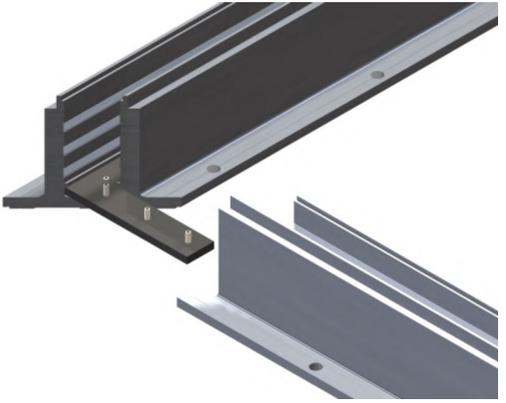
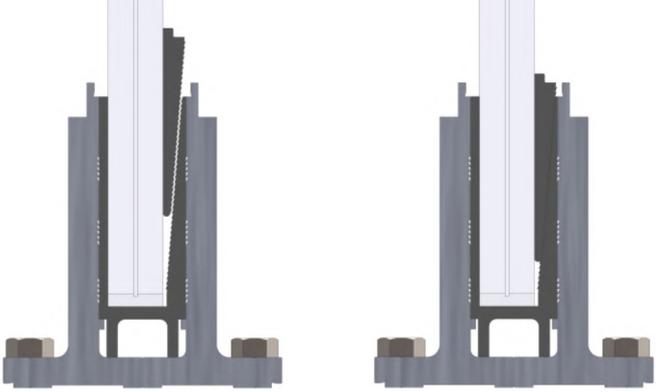
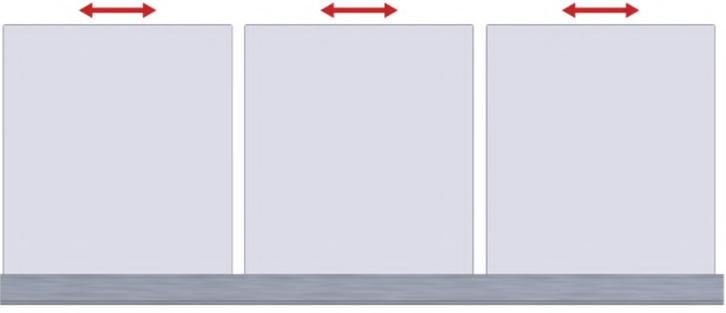
Frameless Glass Balustrade System (SG12) Installation Guide: Below finished floor level - Wedges


[Visit the web page here](#)

WITH HANDRAIL


FULLY FRAMELESS




<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>< 550</p>  </div> <div style="text-align: center;"> <p>550 - 900</p>  </div> <div style="text-align: center;"> <p>900 - 1250</p>  </div> </div> <p>For panel widths smaller than 550mm two bases are required. For panel widths between 550-900mm three bases are required. For panel widths above 900-1250mm four bases are required.</p>	 <p style="text-align: center;">OUTSIDE INSIDE</p>
<p>1) Glazing bases in combination with glazing wedges are used to secure the glasses in the base track. Calculate the number of bases required per length of base track.</p>	<p>2) Insert the glazing bases where required into the base track section(s) ensuring the tapered side is on the Internal side of the system as shown.</p>
	
<p>3) Prepare to assemble the base track corners and/or straight joints (if applicable).</p>	<p>4) Slide the corner bracket into one of the base track sections and tighten the screws.</p>
	
<p>5) Slide the other side of the base track onto the exposed corner bracket. Hold the corner or joint closed and tighten the screws. In this fashion assemble all the base track sections together and ensure the dimensions and shape fit.</p>	<p>6) Fix the track to the structure with appropriate fixings and level vertically and horizontally.</p>
	
<p>7) Position the glazing bases to receive the first panel and insert the first glass. Insert the glazing wedges by hand to hold the glass.</p>	<p>8) In this fashion insert all the glasses into the section(s) of base track and space the glasses evenly or as desired.</p>

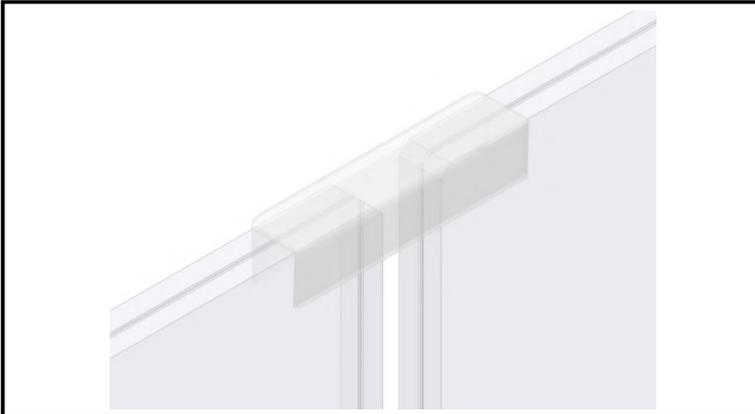

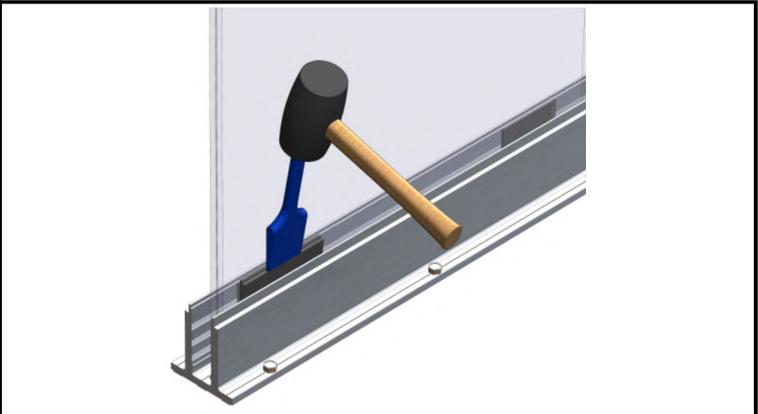9) Install glass gap bridges between glasses (provided on orders without handrails)



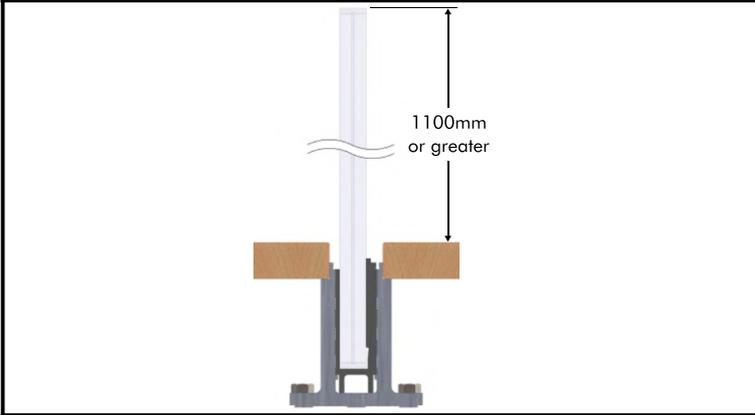10) Using a glazing shovel and a mallet drive all the glazing wedges into the glazing base to secure the glass solidly in place.



11) Please ensure finished flooring is installed so that the remaining height of the glass/balustrade is not less than 1100mm above Finished floor level.